


Transformer Trunk

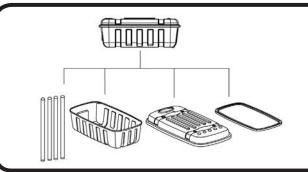


Includes:
Plastic Trunk
Table Base
Aluminum Legs
Table Top

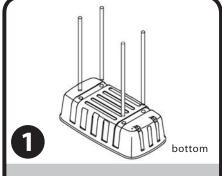


Remove straps, open trunk and remove parts. Turn trunk bottom upside down. Push legs into holes located on the trunk bottom.

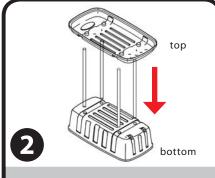


Place trunk top above legs. Align legs with holes in trunk top. Push trunk top down to firmly anchor on legs.

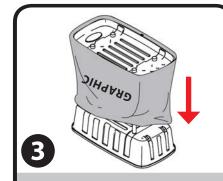

Place graphic material upside down starting at the trunk top. Slide graphic downwards.

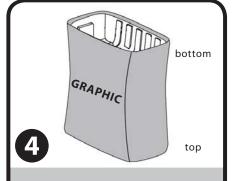

Rotate entire stand 180° so that graphic is now right side up. Pull graphic up and over trunk bottom.

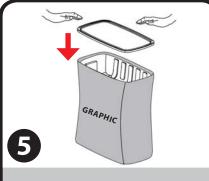

Place table top lid on top of stand and press down.




INSTRUCTIONS

Spring Wall - Medium

Includes:
Frame
Banner
Black Canvas Carrying Bag




Remove spring wall from carry case.

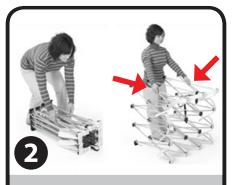

Pull hardware so hardware latticing expands. Hardware can be expanded vertically or horizontally depending on convenience and/or use.




Interlock central, front-side and back-side hooks followed by hooks on top then bottom. This may require assistance. For greater leverage, lay the frame flat on the floor to interlock hooks.

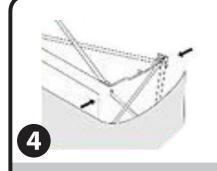

Line up fastener on banner to hardware and affix banner to hardware. Banner should be taut when completely affixed to hardware. IMPORTANT: When taking kit down make sure to verify that ALL hooks have been disconnected from each other.

Note: Although it is possible to leave the banner connected to hardware upon taking kit down, it is not advised as damage to the hardware and banner could result should the banner become caught in the latticing.

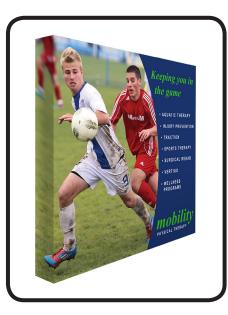


X-Banner



Includes: Body Piece Arms (x2)



Place the X-Banner body piece upright by extending the feet outward. Adjust the height of the telescoping pole on the X-Banner body piece by flipping the switch to the center position. Having the switch turned to the left or right position will lock the height of the telescoping pole.

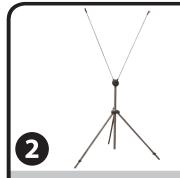

Take the two arms with hooks and attach them to the center piece at the top of the telescoping pole on the X-Banner body piece.



Using your banner with grommets, attach each of the four corners to the X-Banner hooks, starting with the top first.




In order to properly display your banner on the X-Banner body piece, raise the telescoping pole until taut.




Mini X-Banner



Includes: Graphic Mini X-Banner Frame

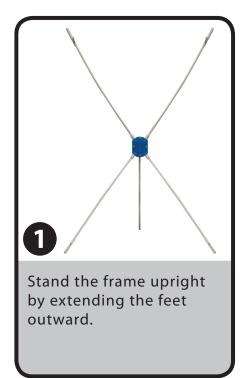

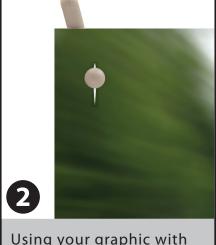

Using your graphic with openings, attach each of the four corners to the hooks on the X-Banner frame.



Ensure that the X-Banner frame is fully extended and taut in order to properly display your graphic.