


# INSTRUCTIONS

## 10' x 10' Heavy Duty Canopy Tent with Full and Half Walls

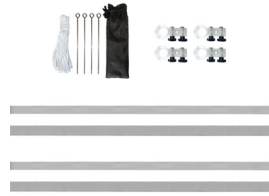

Includes:  
 Hex Tent Frame  
 Half Wall Poles (4)  
 Half Wall Hex Clamps (4)  
 Carrying Case with Wheels  
 Graphics: Canopy, Full Wall, Half Wall (2)  
 Stake and Rope Kit

**1**

Place tent frame in center of final place. Remove strap and have two people stand on opposite sides, grasping the outer legs. Lift off of ground and step backwards, stopping when about 1/4 expanded.

**2**

Place tent graphic over frame. DO NOT attach the fastener in the corners.

**3**

Expand the frame out fully by having each person stand on opposite sides, grasping the outer legs, lift up and step backwards at the same time until tent is fully opened.

**4**

Engage the top auto riser at each corner by pushing up with one hand while holding down top of leg with the other hand. Snap button will engage in snap lock hole. Repeat on all other legs. Attach the fastener in the corners of the graphic.

**5**

Lift two adjacent outer legs, push foot down to expose inner legs until you reach the snap lock holes. Repeat on all legs. To adjust height once snap locks are engaged, press down on red button to unlock. **NOTE:** Be sure all legs are set to the same snap lock holes.


**6**

Adjust height of canopy peak using the crank at the center of the tent. Rotate counterclockwise to raise center truss bar, stop when you feel resistance. Close crank lever to lock in place. **NOTE:** When closing tent, be sure to open the crank or center truss bar will not lower


**IMPORTANT:**  
**Windy Conditions** - Stake or use weight bags.  
**Heavy Wind** - Take tent down.  
**Wet Fabric** - Let tent dry before closing.  
**Storage** - Store in case when not in use.  
**Rain** - Do not leave shelter unattended.

**If added support is desired (on soft surfaces):** Thread rope through a sewn-in tab of the canopy down to the ground stake below.  
**NOTE:** If using rope in this manner, it is recommended all four corners be staked. Rope will need to be divided to do this.

**Carrying Case:** When inserting unassembled frame into carrying case, start with top of frame with the feet pointing toward zipper end of the case


 This product is for outdoor promotional use only and should not be left out in extreme weather conditions. Please use common sense guidelines and do not display this product outdoors when extreme winds or storms may be present. Unfinished edges of aluminum may be sharp, please take care when assembling.

**7**




Pick up the full wall.

**8**

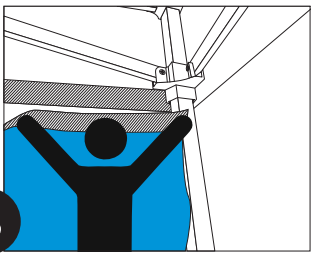


Match the fastener of the full wall with the canopy.

**9**

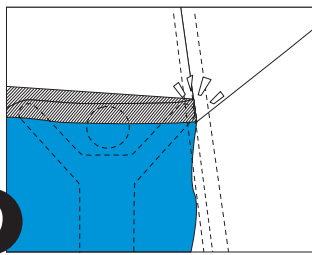


Attach the fastener on the edge of the full wall to the fastener on the canopy.

**10**

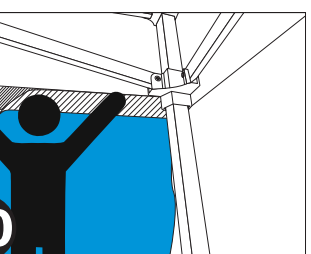

Continue attaching the fastener all the way to the end until the full wall is totally adhered to the canopy.

**11**

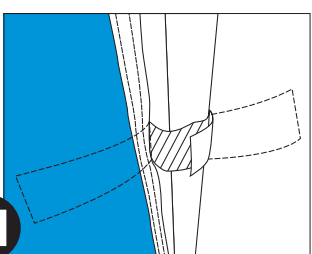

Attach the fastener around each leg on either side of the full wall.

**12**




If your tent has multiple full walls, attach remaining full walls following the same instructions (steps 7-11).

**13**




To attach half wall hex clamps, remove thumbscrews, place on tent leg, being sure the clamp points where the half wall will hang. Replace thumbscrew closest to tent leg. Repeat on second leg.

**14**

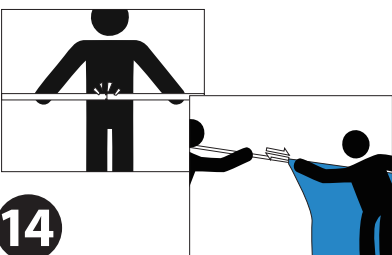

Connect two half wall poles. Slide the assembled pole through the pole sleeve of the half wall.

**15**

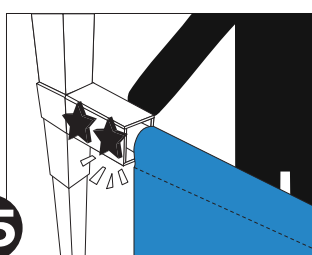


Insert one end of pole into a clamp, insert second thumbscrew and tighten. Repeat for other end of pole.

**16**



Adjust height of half wall by loosening thumbscrews. Tighten both sets of clamps to hold the wall in place.

**17**

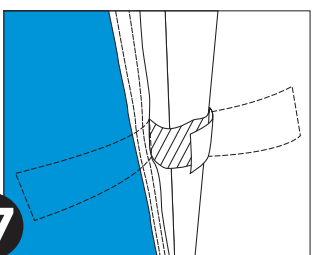

Attach the fastener around each leg on either side of the half wall.

**18**



Connect the second half wall following the same instructions (steps 14-17).