

# INSTRUCTIONS

## 10' x 20' Heavy Duty Canopy Tent



Includes:  
Hex Tent Frame  
Carrying Case with Wheels  
Canopy Graphic  
Stake and Rope Kit



1

Place tent frame in center of final place. Remove strap and have three to four people stand on opposite sides, grasping the outer legs. Lift off of ground and step backwards, stopping when about 1/4 expanded.




2

Place tent graphic over frame. DO NOT attach the fastener in the corners.



3

Expand the frame out fully by having each person move to the middle leg of the 20' side. Grasp at bottom of the v. Lift up and step backwards at the same time until tent is fully opened.

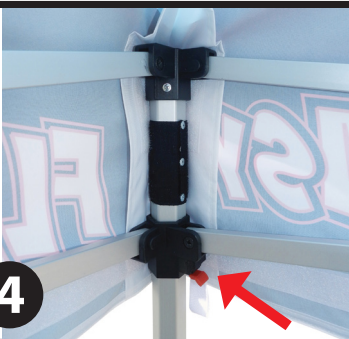


4

Engage the top auto riser at each corner by pushing up with one hand while holding down top of leg with the other hand. Snap button will engage in snap lock hole. Repeat on all other legs. Attach the fastener in the corners of the graphic.



5

Lift two adjacent outer legs, push foot down to expose inner legs until you reach the snap lock holes. Repeat on all legs. To adjust height once snap locks are engaged, press down on red button to unlock. **NOTE:** Be sure all legs are set to the same snap lock holes.

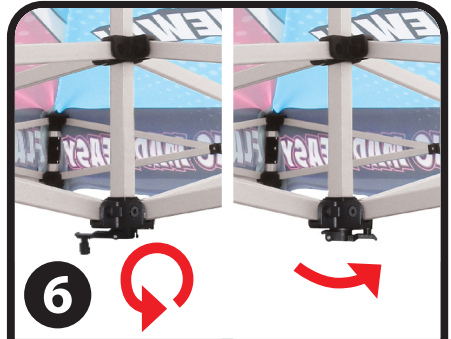

6

Adjust height of canopy peak using the 3 cranks at the middle of the tent. Rotate counterclockwise to raise center truss bars, stop when you feel resistance. Close crank levers to lock in place. **NOTE:** When closing tent, be sure to open the cranks or center truss bars will not lower.

### IMPORTANT:

**Windy Conditions** - Stake or use weight bags.  
**Heavy Wind** - Take tent down.  
**Wet Fabric** - Let tent dry before closing.  
**Storage** - Store in case when not in use.  
**Rain** - Do not leave shelter unattended.

**If added support is desired (on soft surfaces):** Thread rope through a sewn-in tab of the canopy down to the ground stake below.

**NOTE:** If using rope in this manner, it is recommended all four corners be staked. Rope will need to be divided to do this.



**Carrying Case:** When inserting unassembled frame into carrying case, start with top of frame with the feet pointing toward zipper end of the case



This product is for outdoor promotional use only and should not be left out in extreme weather conditions. Please use common sense guidelines and do not display this product outdoors when extreme winds or storms may be present.

Unfinished edges of aluminum may be sharp, please take care when assembling.