


INSTRUCTIONS


Tent Corner Banners

Includes: Corner Graphics

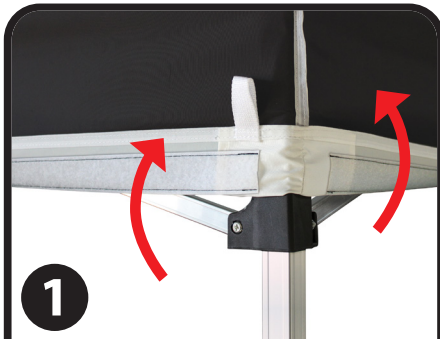

1

After assembling tent, go to one corner. Taking hold of the bottom of the canopy graphic, flip up to expose the fastener on the interior of the canopy graphic.

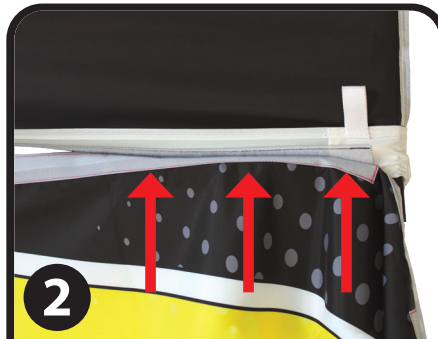

2

Starting at the tent leg, line up the fastener of one corner graphic to the fastener on the canopy and attach, moving away from tent leg. Repeat for second half of corner graphic.


Note: the gap in the fastener on the corner graphic will align with the tent leg.



3

After fully attached, fold the canopy graphic down.

Excess material on the corner graphic may cause the material to pucker. If this is not hidden when the canopy is folded down, tuck the excess material under the canopy graphic.

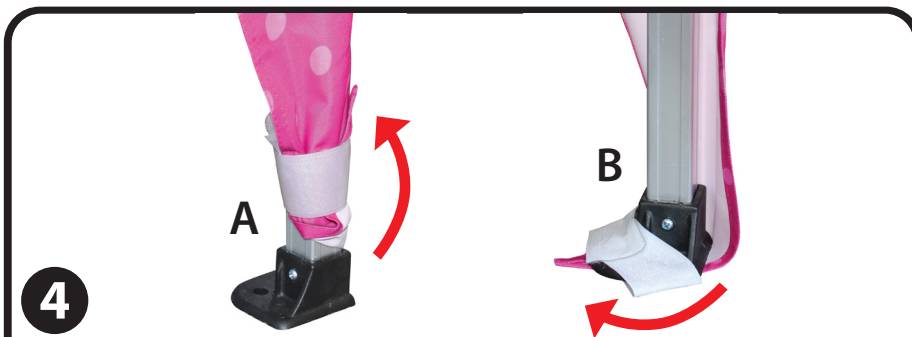

4

There are two options for attaching the corner graphic to the tent leg. Graphic must be taut before attaching fastener.

Option A: Fold bottom of corner graphic upwards and wrap fastener around the tent leg.

Option B: Tuck bottom of corner graphic beneath tent foot and wrap fastener around the foot of the tent leg.

Repeat steps 1-4 on remaining corner graphic(s).



IMPORTANT:

Windy Conditions - Stake or use weight bags.

Heavy Wind - Take tent down.

Wet Fabric - Let tent dry before closing.

Storage - Store in case when not in use.

Rain - Do not leave shelter unattended.

Remove corner graphics from tent frame prior to disassembly.



This product is for outdoor promotional use only and should not be left out in extreme weather conditions. Please use common sense guidelines and do not display this product outdoors when extreme winds or storms may be present.