

INSTRUCTIONS

8' x 8' Backdrop Banner



Includes:
Winged Bolt (x4)
Screw (x2)
Foot (x2)
Horizontal Telescoping Poles (x2) [longer poles]
Vertical Telescoping Poles (x2) [shorter poles]


*****You will need a Phillips Screwdriver to assemble. Not included.**



1

Position the first foot next to the vertical telescoping pole. Insert the pole into the hole located on the top of the foot. Thread a screw through the hole in the bottom center of the foot and tighten with a Phillips screwdriver.

Repeat step 1 for second foot.

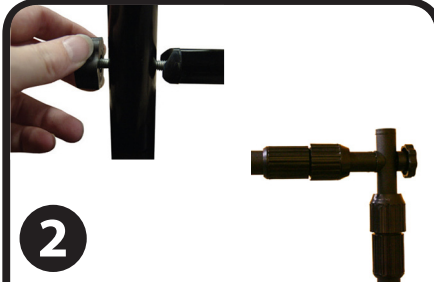


2

Align the contoured curve of one of the horizontal poles to the hole at the end of one of the upper vertical telescoping pole holes. Insert a winged bolt through the hole in the vertical telescoping pole and screw into the threaded hole in the horizontal pole. Turn the winged bolt clockwise until tight. *****Do NOT over-tighten winged bolts or UNIT WILL FAIL.**



3

Before attaching other side of horizontal pole to the vertical pole, thread pole sleeve around horizontal pole. Then attach top horizontal pole to vertical pole like previous. If contour is not aligned with pole, turn telescoping joint clockwise to loosen and align.

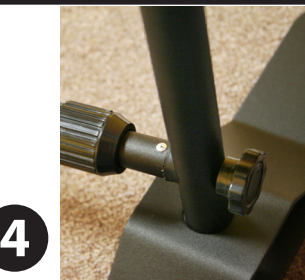

4

Align the contoured curve of the other horizontal pole to the hole at the end of one of the lower vertical telescoping poles. Follow directions on step 2. Repeat threading pole sleeve of flag around pole before attaching the other side.



5

To make banner taut simply lift the upper horizontal telescoping pole and turn the telescoping joint of the vertical telescoping poles counterclockwise and lock in place by turning the telescoping joint clockwise when banner is taut. Repeat with crossbar to adjust width of frame.



INSTRUCTIONS

X-Banner



Includes:
Body Piece
Arms (x2)

1



Place the X-Banner body piece upright by extending the feet outward. Adjust the height of the telescoping pole on the X-Banner body piece by flipping the switch to the center position. *Having the switch turned to the left or right position will lock the height of the telescoping pole.*

2



Take the two arms with hooks and attach them to the center piece at the top of the telescoping pole on the X-Banner body piece.

3



Using your banner with grommets, attach each of the four corners to the X-Banner hooks, starting with the top first.

4



In order to properly display your banner on the X-Banner body piece, raise the telescoping pole until taut.

