SlimFit Wall



Includes:

Poles
2 Elbow joints


2 90-degree bends

2 Feet Graphic


Carrying bag



Using the numbers on the frame, connect the exterior tubes.

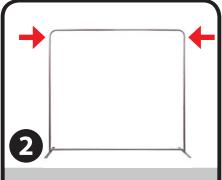


Then lay the frame down and insert the center rods.

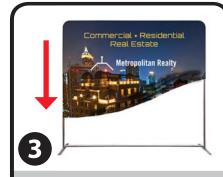

Starting from the top corner, pull the fabric graphic over the frame.




Adjust the graphic and frame as needed to ensure the graphic is straight and secure.

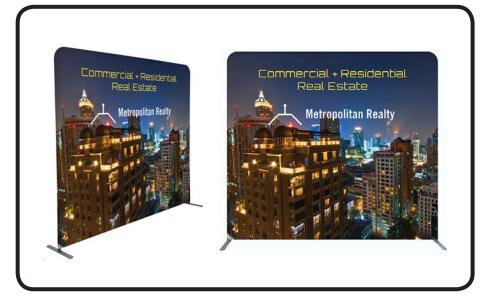


SlimFit Steel Base




Includes:
Poles
Steel base
Graphic
Allen wrench

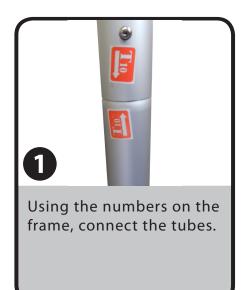



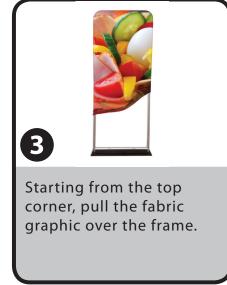

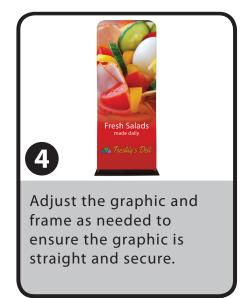



InstaStand



Includes: Carrying case InstaStand Graphic



Table comes in the compact (down position). Pull up until table starts to rise on its own.




Table will rise until fully expanded. When finished push top back down until unit collapses again.



Mini X-Banner



Includes: Graphic Mini X-Banner Frame

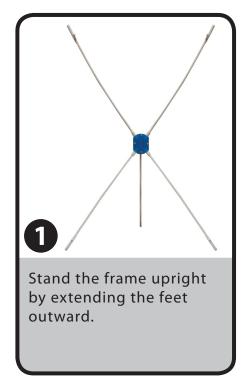



Using your graphic with openings, attach each of the four corners to the hooks on the X-Banner frame.



Ensure that the X-Banner frame is fully extended and taut in order to properly display your graphic.


X-Banner



Includes: Body Piece Arms (x2)



Place the X-Banner body piece upright by extending the feet outward. Adjust the height of the telescoping pole on the X-Banner body piece by flipping the switch to the center position. Having the switch turned to the left or right position will lock the height of the telescoping pole.

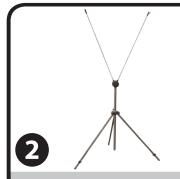

Take the two arms with hooks and attach them to the center piece at the top of the telescoping pole on the X-Banner body piece.



Using your banner with grommets, attach each of the four corners to the X-Banner hooks, starting with the top first.



In order to properly display your banner on the X-Banner body piece, raise the telescoping pole until taut.

