

INSTRUCTIONS


10' x 20' Canopy Tent




Includes:
Tent Frame
Carrying Case with Wheels
Canopy Graphic



1
Place tent frame in center of final place. Remove strap and have three to four people stand on opposite sides, grasping the outer legs. Lift off of ground and step backwards, stopping when about 1/4 expanded.

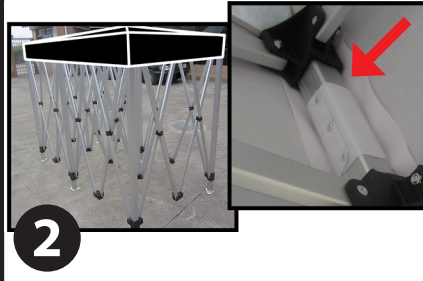

2
Place tent graphic over frame. DO NOT attach the fastener in the corners.

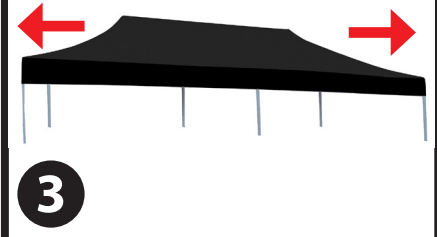

3
Expand frame out fully by having each person move to the middle leg of the 20' side. Grasp at bottom of the v. Lift up and step backwards at the same time until tent is fully opened.



4
Engage the auto slider at each corner by pushing up with one hand while holding down top of leg with the other hand. Snap button will engage in groove. Repeat on all other legs. Attach the fastener in the corners of the graphic.



5
Lift two adjacent outer legs and pull out the inner legs until you reach the snap locks. Repeat on all legs. Raise or level the tent using adjacent holes found near bottom of each leg.



IMPORTANT:

Windy Conditions - Stake or use weight bags.

Heavy Wind - Take tent down.

Wet Fabric - Let tent dry before closing.

Storage - Store in case when not in use.

Rain - Do not leave shelter unattended.



This product is for outdoor promotional use only and should not be left out in extreme weather conditions. Please use common sense guidelines and do not display this product outdoors when extreme winds or storms may be present.