

INSTRUCTIONS

10' x 10' Heavy Duty Canopy Tent with Full and Half Walls



Includes:
Hex Tent Frame
Carrying Case with Wheels
Stake and Rope Kit
Canopy Graphic



1

Place tent frame in center of final place. Remove strap and have two people stand on opposite sides, grasping the outer legs. Lift off of ground and step backwards, stopping when about 1/4 expanded.



2

Place tent graphic over frame. DO NOT attach the fastener in the corners.



3

Expand the frame out fully by having each person stand on opposite sides, grasping the outer legs, lift up and step backwards at the same time until tent is fully opened.




4

Engage the top auto riser at each corner by pushing up with one hand while holding down top of leg with the other hand. Snap button will engage in snap lock hole. Repeat on all other legs. Attach the fastener in the corners of the graphic.



5

Lift two adjacent outer legs, push foot down to expose inner legs until you reach the snap lock holes. Repeat on all legs. To adjust height once snap locks are engaged, press down on red button to unlock. **NOTE:** Be sure all legs are set to the same snap lock holes.

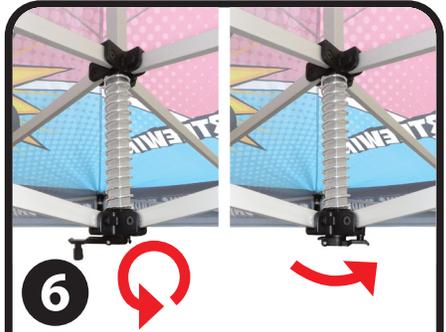

6

Adjust height of canopy peak using the crank at the center of the tent. Rotate counterclockwise to raise center truss bar, stop when you feel resistance. Close crank lever to lock in place. **NOTE:** When closing tent, be sure to open the crank or center truss bar will not lower



This product is for outdoor promotional use only and should not be left out in extreme weather conditions. Please use common sense guidelines and do not display this product outdoors when extreme winds or storms may be present.


IMPORTANT:

Windy Conditions - Stake or use weight bags.
Heavy Wind - Take tent down.
Wet Fabric - Let tent dry before closing.
Storage - Store in case when not in use.
Rain - Do not leave shelter unattended.




6

Pick up the full wall.

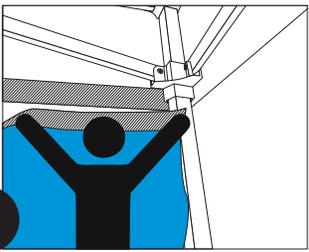


7

Match the fastener of the full wall with the canopy.

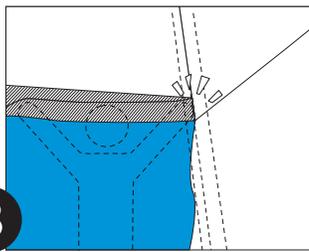


8

Attach the fastener on the edge of the full wall to the fastener on the canopy.

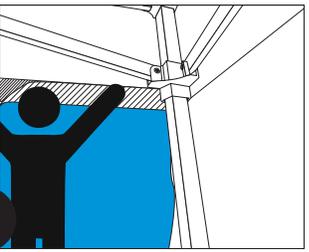

9

Continue attaching the fastener all the way to the end until the full wall is totally adhered to the canopy.

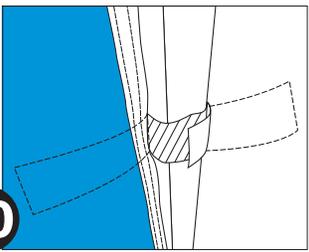


10

Attach the fastener around each leg on either side of the full wall.




11

If your tent has multiple full walls, attach remaining full walls following the same instructions (steps 6-10).

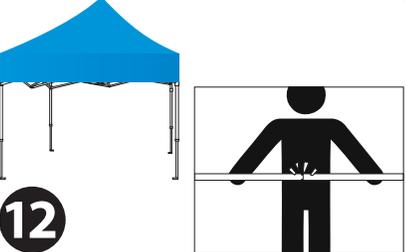


12

Attach the connection parts to the frame. Connect the two steel connection bars.

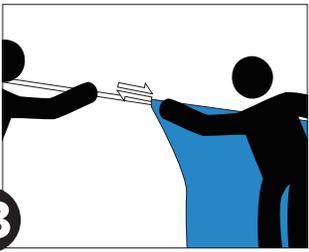


13

Slide the steel connection bar through the pole sleeve of the half wall.

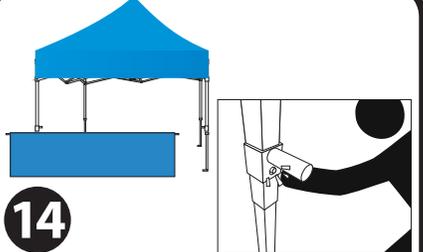


14

Align the connection bar with the hole of the parts.

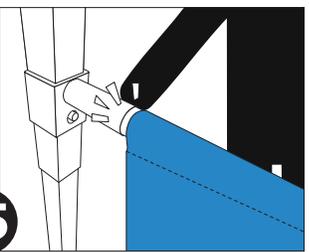

15

Insert both ends into the connection parts.

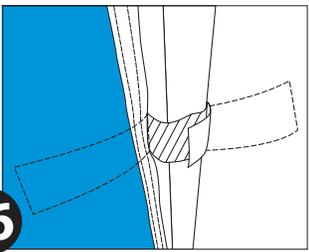

16

Attach the fastener around each leg on either side of the half wall.



17

Connect the second half wall following the same instructions (steps 12-16).