


INSTRUCTIONS

Banner Saver Hardware for Avenue Banners

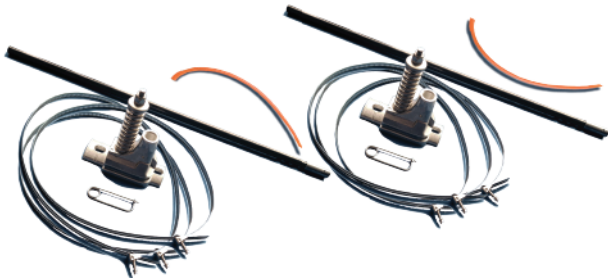

Includes:

- Spring Loaded Brackets (2x)
- Fiberglass Rods (2x)
- Locking Spring Clips (2x)
- Stainless Steel Mounting Straps (6x)
- Zip Ties (2x)

***Flathead screwdriver & 3/4" wrench-NOT INCLUDED**

1




Before beginning the install, turn each Spring Loaded Bracket around and tighten the 3/4" bolt head that is located on the back.

2




Attach the upper Mounting Strap loosely to the post at the desired height. Slip the Top Bracket behind the Strap. The spring will be above the Rod hole. Place the Strap onto the Bracket's flange and into the channel.

3

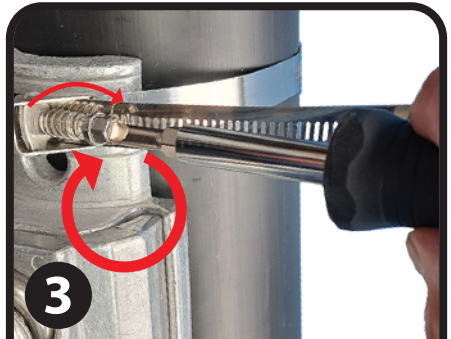

Press the tension screw against the Strap and tighten it by turning the screw. Attach a Mounting Strap onto the Bracket flange's lower mounting channel, attach a 2nd Strap to the upper Bracket flange. Tighten all Strap screws.

4

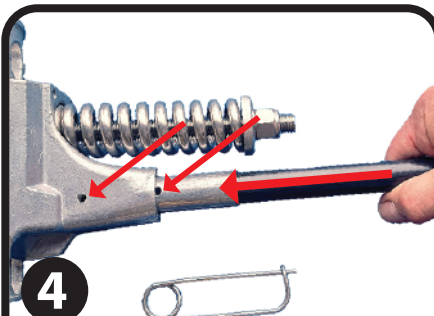


Insert the Rod shaft into the Bracket hole. Be sure to align the Spring Clip hole of the Rod with the Bracket's Spring Clip hole.

5



Insert a Spring Clip through the Bracket and Rod. Close the Spring by pushing the hook portion up and over the protruding wire. Mirror the Bracket attachment for the bottom Bracket: spring below the Rod hole. Tighten the Straps.

6

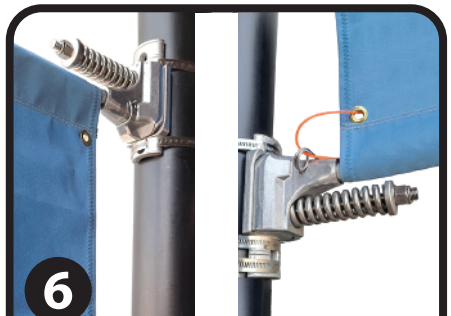

Secure banner to Bracket by threading a Zip Tie through both banner grommet and Spring Clip as shown above. Lock the Zip Tie by inserting its tip into its head until it clicks at least twice.



This product is for outdoor promotional use only and should not be left out in extreme weather conditions. Please use common sense guidelines and do not display this product outdoors when extreme winds or storms may be present.