
## INSTRUCTIONS




Includes: 20" Bar 23" Bar Post Nut Spacer\*



Place 20" bar on a surface with feet facing downwards. Place spacer on top, aligning spacer hole with center hole of the bar.

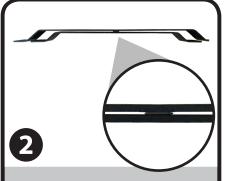

Place 23" bar on top, sandwiching the spacer between both bars. Align holes.

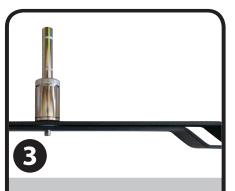

With the 20" bar on bottom, 23" bar on top, and spacer in between, marry the two bars together with the post.

4 Screw the nut onto the bottom of the post to hold the pieces together.



To use, separate both legs until perpendicular.

 \* Spacer may not be included with cross base.
It is an optional piece and not required for use.